

IP66/IP67/IP68 Industrial Peristaltic Pump

Model : HP265

Flow Rate : 2.252-18000mL/min

IP rate : IP66/IP67/IP68



Introduction

- The pump shell protection level is IP66/IP67/IP68, special designed for industrial environment. The pump has 6 types of sealing structures, which can withstand various harsh hot and humid environments, ensure long-term stable operation of the pump.
- Intelligent control system, support transferring and dispensing function.
- 4.3 inch touch screen, easy operation, easy parameter setting and calibration.

Product Features

- IP66/IP67/IP68 protection rating, special designed for industrial environment.
- Intelligent control system.
- Passed EMC test Excellent anti-electromagnetic interference.
- The automatic pressure control device ensures internal and external pressure balance.
- Inside and outside of the external control interface are both circuit isolation.
- Servo motor.
- Casting shell with excellent heat dissipation performance.



Control Interface



Pump Head




UT35



Pump Head	Tubing		mL/r	Speed:0.1-265mL Flow Rate(mL/min)	Tubing Max.Pressure(Mpa)		Rollers number	Weight(kg)
	Size	ID×Wall Thickness(mm)			Intermittent	Continuous		
UT35(4)	12x4	12x4	34.34	3.434-9100	0.12	0.1	4 rollers	4.65
	17x4	17x4	55.85	5.585-14800	0.11	0.1		

Pump Head	Tubing		mL/r	Speed:0.1-265mL Flow Rate(mL/min)	Tubing Max.Pressure(Mpa)		Rollers number	Weight(kg)
	Size	ID×Wall Thickness(mm)			Intermittent	Continuous		
UT35(2)	26#	6.4x3.3	22.52	2.252-5970	0.15	0.12	2 rollers	3.99
	73#	9.6x3.3	24.15	2.415-6400	0.16	0.12		
	82#	12.7x3.3	42.26	4.226-11200	0.15	0.1		
	15.9x3.3	15.9x3.3	62.75	6.275-16630	0.15	0.12		
	12x4	12x4	41.5	4.150-11000	0.15	0.12		
	17x4	17x4	67.92	6.792-18000	0.13	0.12		

Dimension Drawing(mm)

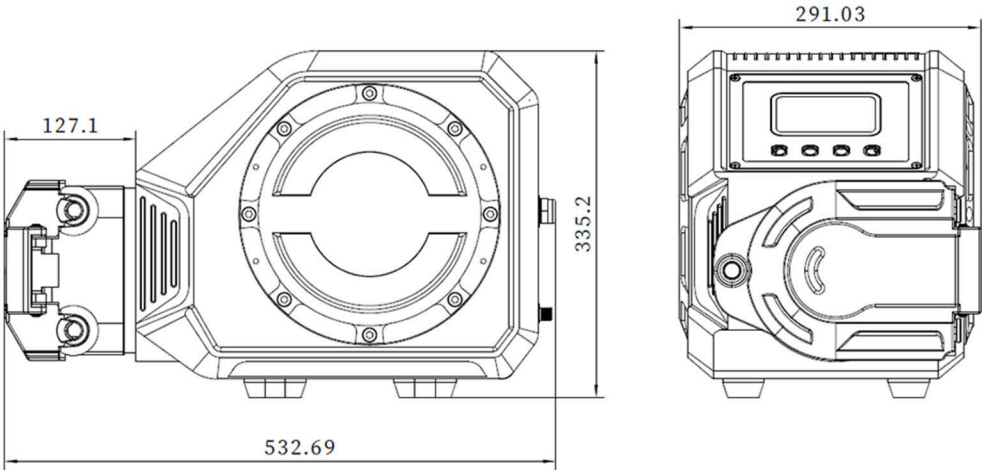



Specifications

EMC Standard	IEC 61000-6-2/IEC 61000-6-4/IEC 61000-3-2/IEC 61000-3-3
Housing material	Aluminum Alloy
Speed range	0.1-265rpm
Speed resolution	0.01rpm
Display	4.3 inch -Industrial grade - True color LCD screen
Control method	Touch screen, mechanical buttons, external signal, communication
Working mode	Flow rate mode, Dispensing mode.
Flow rate mode	Continuous transferring according to the set flow rate or motor speed.
Dispensing mode	Fixed time and volume dispensing: Set the dispensing volume, dispensing time, repeat number and pause time.
	Fixed volume dispensing: Set the dispensing volume, flow rate, repeat number and pause time.
	Speed/time dispensing: Set the motor speed (rpm), dispensing time, repeat number and pause time.
Dispensing volume	0.1mL-9999L
Dispensing time	0.1sec-9999hours
Pause time	0.5sec-9999sec
Repeat number	1-9999 times, 0 represents unlimited
Calibration function	Input actual volume and calibrate automatically
Back suction angle	0-360°
Communication	RS485, RS232
Communication protocol	Modbus protocol(RTU mode)
External control speed signal	0-5V, 0-10V, 4-20mA (For option)
External control signal input	Active switch signal (5-24V) control start/stop, direction and full speed; Passive switch signal control start/stop.
Signal output	Open collector output working status.
Lock screen function	Prevent accidental touches.
Password protection function	Prevent misoperation.
Drive dimension	474mm*285mm*335mm(L×W×H)
Power supply	AC 220V±10% 50Hz/60Hz
Rated power	300W
Relative humidity	<100%
Condition temperature	0-40°C
IP rate	IP66/IP67/IP68
Drive weight	26kg

Tubing Installation Procedure

2-Roller Pump Head Tubing Installation



1. Press the locking switch to open the pump head.



2. Install the upper and lower tube clamps.



3. Install the tubing into the pump head and place it smoothly into the corresponding tube clamps.



4. Rotate the roller assembly and move the rollers into the working position using the lever.



5. Close the pump head housing to complete the tubing installation.

4-Roller Pump Head Tubing Installation



1. Built-in Tubing Assembly



2. Press the locking switch to open the pump head.



3. Install the built-in tube assembly into the pump head and press the tube connectors into the corresponding grooves.



4. Rotate the roller assembly and move the rollers into the working position using the lever.



5. Close the pump head housing to complete the tubing installation.